

DIALER PROGRAMMING (*40-*49)

For fields *40-*42, enter digits 0-9, or # + 11 for [*], # + 12 for [#], # + 13 for 2 second pause. If fewer than the maximum number of digits is entered, exit the field by pressing [*] followed by the next field number to be programmed.

* 4 0 PABX ACCESS CODE

Enter 4 digits. To clear entries from field, press *40*.

* 4 1 PRIMARY PHONE No.

Enter up to 12 digits. Do not fill unused spaces.

To clear entries from field, press *41*.

* 4 2 SECONDARY PHONE No.

Enter up to 12 digits. Do not fill unused spaces.

To clear entries from field, press *42*.

* 4 3 SUBSCRIBER ACCOUNT No.

Enter 0-9; #+11 for B; #+12 for C; #+13 for D; #+14 for E; [#+15 for F]. Enter * as 4th digit, if 3+1 dialer reporting is to be used. If only 3 digits used, exit by pressing * (and press 44, if entering next field). To clear entries from field, press *43*.

Examples: For Acct No. 1234, enter: 1 2 3 4
 For Acct No. B234, enter: #+11 2 3 4
 For Acct No. 123, enter: 1 2 3 *

* 4 4 REPORT FORMAT

[0]

0 = 3+1, 4+1 ADEMCO L/S STANDARD
 1 = 3+1, 4+1 RADIONICS STANDARD
 2 = 4+2 ADEMCO L/S STANDARD
 3 = 4+2 RADIONICS STANDARD

6 or undefined = 4+2 ADEMCO EXPRESS
 7 = ADEMCO CONTACT ID REPORTING
 8 = 3+1, 4+1 ADEMCO L/S EXPANDED
 9 = 3+1, 4+1 RADIONICS EXPANDED

* 4 5 PHONE SYSTEM SELECT

† [0]

If Cent. Sta. IS NOT on a WATS line: 0 = Pulse Dial; 1 = Tone Dial
 If Cent. Sta. IS on a WATS line: 2 = Pulse Dial; 3 = Tone Dial

* 4 6 SESCOA/RADIONICS SELECT

† [0]

0 = Radionics (0-9, B-F reporting); 1 = SESCOA (0-9 only reporting)
 Select 0 for all other formats.

* 4 7 15 SEC DIALER DELAY (BURG)

† [0]

0 = no, 1 = yes

* 4 8 PERIODIC TEST MESSAGE

† [0]

0 = none, 1 = 24 hrs; 2 = weekly (enter Test Code in field *64)
 (Initial report is sent 12 hrs. after exiting programming or downloading.)

* 4 9 SPLIT/DUAL REPORTING

[0]

TO PRIMARY PHONE No.

0 = All
 1 = Alarms, Restore, Cancel
 2 = All Reports except Open/Close, Test
 3 = Alarms, Restore, Cancel
 4 = All Reports except Open, Close, Test
 5 = All Reports (Dual Reporting)

TO SECONDARY PHONE No.

Backup Report Only
 Other Reports
 Open/Close, Test
 All Reports
 All Reports
 All Reports

TO PRIMARY PHONE No.

6 = All reports except open/close
 7 = All reports
 8 = All reports

TO PAGER No. †† (secondary)

Alarms, Open/Close, Trouble
 Alarms, Troubles
 Alarms, Open/Close, Troubles

† Entry of a number other than one specified will give unpredictable results.

†† Can only be used if primary reporting format is Ademco Contact ID.

ALARM REPORT CODES (*50-*59)

*50 1st DIGIT OF Zn 95, Zn 96 (Keypad Panics) (95) (96)

Enter 1-9, 0, B-F as described in box below.
An entry of "0" will disable report.

2nd Digit of each (for expanded or 4+2 reporting) is same as for field *57.

Zone 95 is Console Silent Panic (Key A or 1 & *).

Zone 96 is Console Audible Panic (Key C or 3 & #).

*51 ZONE 1 ALARM REPORT CODE

*52 ZONE 2 ALARM REPORT CODE

*53 ZONE 3 ALARM REPORT CODE

*54 ZONE 4 ALARM REPORT CODE

*55 ZONE 5 ALARM REPORT CODE

*56 ZONE 6 ALARM REPORT CODE

*57 ZONE 7 ALARM REPORT CODE (Console Panic: Key B or *&#)

*58 ZONE 8 ALARM RPT CODE (Duress)

*59 ZONE 9 ALARM RPT CODE (RF supervision)

SYSTEM STATUS REPORT CODES (*60-*68)

*60 TROUBLE REPORT CODE

*61 BYPASS REPORT CODE

*62 AC LOSS REPORT CODE

*63 LOW BAT REPORT CODE

*64 TEST REPORT CODE

*65 OPEN REPORT CODE ††

*66 CLOSE REPORT CODE ††

†† 2nd digit is automatically sent as the user number if expanded or 4+2 reporting is selected.

*67 RF XMTR LOW BAT REPORT CODE

*68 CANCEL REPORT CODE

RESTORE REPORT CODES (*69-*75)

*69 GROUP RESTORES for TROUBLE, RF LOW BATTERY, BYPASS [0]
0 = no (report for each restore),
1 = yes (report after all zones restored)
Note: "1" not applicable to Contact ID reporting.

*70 ALARM RESTORE REPORT CODE
2nd digit is automatically sent as the 2nd digit of the zone alarm report code programmed in *50-*59 and *76-*83, if expanded or 4+2 reporting is selected.

*71 TROUBLE RESTORE REPORT CODE

*72 BYPASS RESTORE REPORT CODE

*73 AC RESTORE REPORT CODE

*74 LOW BAT RESTORE REPORT CODE

*75 RF XMTR LO BAT RSTR RPT CODE

TO PROGRAM REPORT CODES FOR ALARM, SYSTEM STATUS, RESTORE, & WIRELESS ZONES (*51-*83)

For 3+1 or 4+1 Standard Format:

Enter a code in the *first* box: 1-9, 0, B, C, D, E, or F.
Enter "#+10" for 0, "#+11" for B, "#+12" for C, "#+13" for D, "#+14" for E, "#+15" for F.

For Expanded or 4+2 Format:

Enter codes in *both* boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

For Ademco Contact ID Format:

Enter any digit (other than "0") in the *first* box, to enable zone to report. This is an "enabling" code only and is not the actual report sent to the central office. Entries in the *second* box will be ignored.



An entry of "0" in the *first* box for any report format will **disable** a report. An entry of "0" in the *second* box will result in automatic advance to the next field when programming. **To send "0" as a digit, you must enter # + 10.**

Examples:

For Code 3 (Single Digit), enter: 3 0

For Code 32 (Two Digits), enter: 3 2

For Code B2 (Hexadecimal) enter: #11 2

